

ASUS ZenWatch™

Parts and features

Package contents



Charging cradle




Power adapter



ASUS ZenWatch



USB to micro USB
cable





Technical documentations

IMPORTANT!


- The bundled power adapter varies with country or region.
- If any of the items is damaged or missing, contact your retailer immediately.

Get to know your ASUS ZenWatch

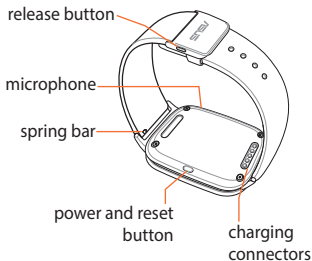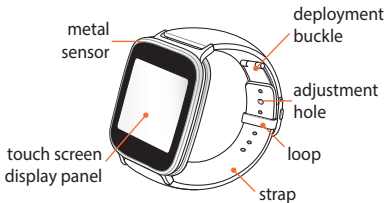


Adjusting the straps

1. Press the release buttons to unfold the deployment buckle.

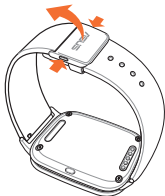


2. Detach the pin from its current hole, then move the strap according to your desired length.

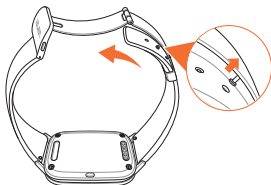

Replacing the strap

IMPORTANT! Your ASUS ZenWatch is compatible with watch straps that have a standard 22 mm spring bar pin.


1. Press the pin on your current strap, as shown below, to detach it from the ASUS ZenWatch.



2. Gently pull out the current strap to replace it with a new one. Refer to your new wrist band's replacement instructions.




Parts of the charging cradle

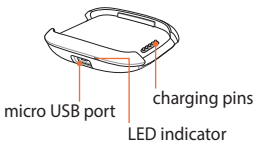


Charging the ASUS ZenWatch

1. Connect the charging pins to the charging connectors.

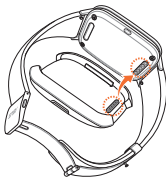

2. Connect the micro USB to USB cable to your power adapter, then connect the power adapter to a nearby power outlet.



3. Connect the micro USB to USB cable to the charging cradle to start charging your ASUS ZenWatch.



Resetting your ASUS ZenWatch

Resetting your ASUS ZenWatch restores it to its factory settings.

1. Press the power and reset button at the back of your ASUS ZenWatch to launch the **Settings** screen.
2. Swipe upward then tap **Reset device** then the check mark.


IMPORTANT! After resetting your ASUS ZenWatch, you need to pair it again with your phone. For details, refer to *Pairing for the first time*.

Pairing with another device

IMPORTANT! Reset your ASUS ZenWatch to its factory settings before you start pairing it with another phone.

1. Press the power and reset button at the back of your ASUS ZenWatch to launch the **Settings** screen.
2. Swipe upward then tap **Reset device** then the check mark.
3. The next time your ASUS ZenWatch powers on, it will display **Install Android wear on your phone**.
4. Refer to *Pairing for the first time* in the quick start guide for details on pairing your ASUS ZenWatch with a phone.


Pairing with multiple ASUS ZenWatch devices

1. Power on your ASUS ZenWatch.
2. Get your phone, enable Bluetooth, then place it near your ASUS ZenWatch.
3. Launch **Android Wear** on your phone then tap  > **Pair with a new wearable.**
4. Tap the name of the ASUS ZenWatch you would like to pair.
5. Compare the passcodes on your ASUS ZenWatch and phone and ensure that they match. If they do, tap **Pair** on both devices.

Restarting your ASUS ZenWatch

1. Press the power and reset button at the back of your ASUS ZenWatch to launch the **Settings** screen.
2. Swipe upward then tap **Restart** then the check mark.

Powering off

1. Press and hold the reset button to launch **Settings**.
2. Swipe up on the Settings screen and touch **Power off**.
3. Touch .

Safety precautions

- Your ASUS ZenWatch is water-resistant, not waterproof. Keep it dry and refrain from using it near liquids, rain, moisture, and other sources of water or liquid. If it gets wet, wipe immediately using a soft dry cloth.
- Ensure that your ASUS ZenWatch is dry before using it with app features.
- Follow the warning labels for your personal safety.
- Never attempt to short-circuit the battery inside your ASUS ZenWatch.
- Never attempt to disassemble and reassemble the battery.
- Discontinue usage if leakage is found.
- The ASUS ZenWatch and the charging cradle must be recycled or disposed of properly.
- Keep any small components away from children.
- Your ASUS ZenWatch should only be used in environments with ambient temperatures between 5°C and 40°C.

Copyright information

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ASUSTeK COMPUTER INC. ("ASUS").

ASUS PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL ASUS, ITS DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFITS, LOSS OF BUSINESS, LOSS OF USE OR DATA, INTERRUPTION OF BUSINESS AND THE LIKE), EVEN IF ASUS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES ARISING FROM ANY DEFECT OR ERROR IN THIS MANUAL OR PRODUCT.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

SPECIFICATIONS AND INFORMATION CONTAINED IN THIS MANUAL ARE FURNISHED FOR INFORMATIONAL USE ONLY, AND ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE, AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY ASUS. ASUS ASSUMES NO RESPONSIBILITY OR LIABILITY FOR ANY ERRORS OR INACCURACIES THAT MAY APPEAR IN THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT.

Copyright © 2014 ASUSTeK COMPUTER INC. All Rights Reserved.

E-Manual version

For the full manual version of your ASUS ZenWatch, visit our multi-language web site at:

<http://support.asus.com>

Limitation of liability

Circumstances may arise where because of a default on ASUS' part or other liability, you are entitled to recover damages from ASUS. In each such instance, regardless of the basis on which you are entitled to claim damages from ASUS, ASUS is liable for no more than damages for bodily injury (including death) and damage to real property and tangible personal property; or any other actual and direct damages resulted from omission or failure of performing legal duties under this Warranty Statement, up to the listed contract price of each product.

ASUS will only be responsible for or indemnify you for loss, damages or claims based in contract, tort or infringement under this Warranty Statement.

This limit also applies to ASUS' suppliers and its reseller. It is the maximum for which ASUS, its suppliers, and your reseller are collectively responsible.

UNDER NO CIRCUMSTANCES IS ASUS LIABLE FOR ANY OF THE FOLLOWING: (1) THIRD-PARTY CLAIMS AGAINST YOU FOR DAMAGES; (2) LOSS OF, OR DAMAGE TO, YOUR RECORDS OR DATA; OR (3) SPECIAL, INCIDENTAL, OR INDIRECT DAMAGES OR FOR ANY ECONOMIC CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS), EVEN IF ASUS, ITS SUPPLIERS OR YOUR RESELLER IS INFORMED OF THEIR POSSIBILITY.

Manufacturer	ASUSTek COMPUTER INC.
Address, City	4F No. 150, LI-TE RD., PEITOU, TAIPEI 112, TAIWAN
Telephone Number	+886-2-2894-3447
Authorized Representative in Europe	ASUS COMPUTER GmbH
Address, City	HARKORT STR. 21-23, 40880 RATINGEN
Country	GERMANY

E9916

ASUS[®]
IN SEARCH OF INCREDIBLE



1 3 0 6 0 - 4 4 6 0 0 1 0 0